


# KitchenAid®

FOR THE WAY IT'S MADE.™

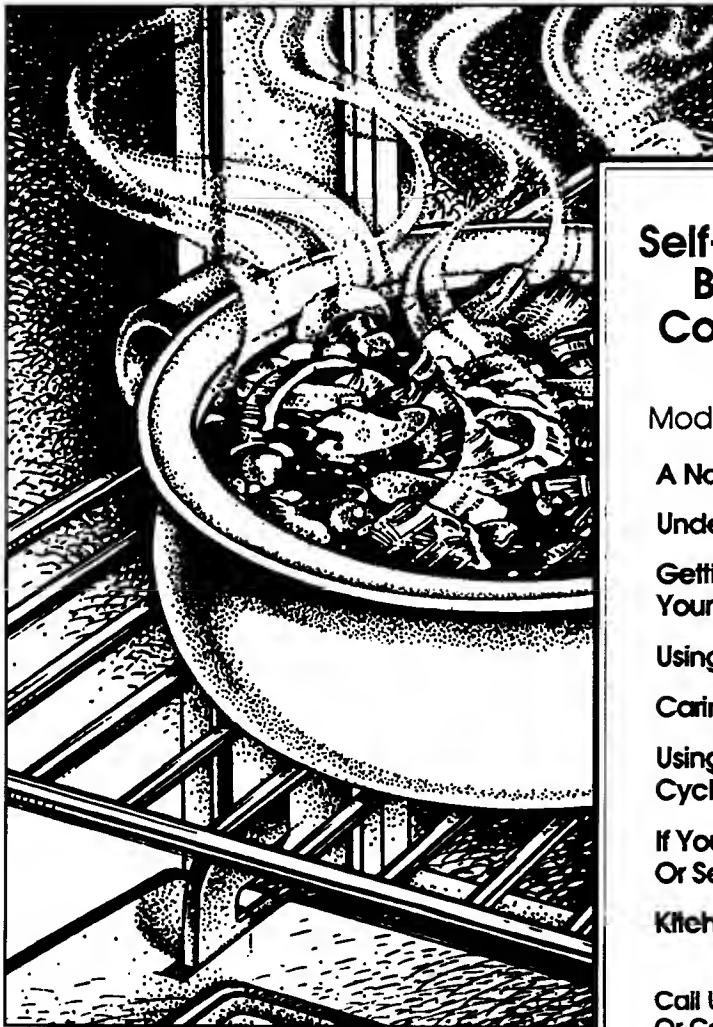

**NOTE:** Use and care instructions for the upper microwave oven are provided in a separate manual.

## **KitchenAid® Self-Cleaning Electric Built-In Thermal- Convection™ Lower Oven**

Models: KEMS377Y KEMS378Y

A Note To You .....	2
Understanding Oven Safety ..	3
Getting To Know Your Oven .....	5
Using Your Oven .....	6
Caring For Your Oven .....	33
Using The Self-Cleaning Cycle .....	36
If You Need Assistance Or Service .....	40
KitchenAid Warranty .....	44

Call Us With Questions  
Or Comments:

**1-800-422-1230**

1-93

# Use and Care Guide

# A Note To You

## Thank you for buying a KitchenAid home appliance.

You have purchased a quality, *world-class* home appliance. Years of engineering experience have gone into its manufacturing. To ensure that you will enjoy many years of trouble-free operation, we have developed this Use and Care Guide. It is full of valuable information on how to operate and maintain your home appliance properly and safely. Please read it carefully. Also, please complete and mail the Ownership Registration Card provided with your home appliance.

## Your safety is important to us.

This guide contains safety symbols and statements. Please pay special attention to these symbols and follow any instructions given. Here is a brief explanation of the use of each symbol.

### **WARNING**

This symbol will help alert you to such dangers as personal injury, burns, fire and electrical shock.

### **CAUTION**

This symbol will help you avoid actions which could cause product damage (scratches, dents, etc.) and damage to your personal property.

## Our Consumer Assistance Center telephone number, 1-800-422-1230, is toll-free, 24 hours a day.

If you ever have a question concerning your home appliance's operation, or if you need service, feel free to call our toll-free Consumer Assistance Center telephone number for help. When calling, you will need to know your appliance's complete model number and serial number. You can find this information on the model and serial number plate (see diagram on page 5). For your convenience, we have included a handy place below for you to record these numbers, as well as purchase information. You will need this information if you ever require service. Keep this book and the sales slip together in a safe place for future reference.

**NOTE:** You must provide proof of purchase or installation date for in-warranty service.

**Model Number** \_\_\_\_\_

**Bullder/Dealer Name** \_\_\_\_\_

**Serial Number** \_\_\_\_\_

**Address** \_\_\_\_\_

**Date Purchased** \_\_\_\_\_

**Phone** \_\_\_\_\_

**Date Installed** \_\_\_\_\_

### Don't forget, KitchenAid offers a full line of quality home appliances.

Built-in Refrigerators

Trash Compactors

Ranges & Cooktops

Freestanding Refrigerators

Hot Water Dispensers

Microwave Ovens

50-Pound Ice Makers

Food Waste Disposers

Washers & Dryers

Dishwashers

Built-in Ovens

Mixers

For more information on these appliances, or the one you have purchased, call our toll-free Consumer Assistance Center telephone number, 1-800-422-1230.

# Important Safety Instructions

## **⚠ WARNING**

To reduce the risk of fire, electrical shock, injury to persons, or damage when using the oven, follow basic precautions, including the following:

### **General**

- Read all instructions before using the oven.
- Install or locate the oven only in accordance with the provided Installation Instructions. The oven must be installed by a qualified installer. The oven must be properly connected to electrical supply and grounded.
- CAUTION: Do not store things children might want above the oven. Children could be burned or injured while climbing on it.
- Do not leave children alone or unattended in area where the oven is in use. They should never be allowed to sit or stand on any part of the oven. They could be burned or injured.
- Do not operate the oven if it is damaged or not working properly.
- Do not use the oven for warming or heating the room. Persons could be burned or injured, or a fire could start.
- Use the oven only for its intended use as described in this manual.
- DO NOT TOUCH HEATING ELEMENTS OR INTERIOR SURFACES OF OVEN. Heating elements may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the oven may become hot enough to cause burns; such as, the oven vent opening, the surface near the vent opening, the oven door and window.
- Do not wear loose or hanging garments when using the oven. They could ignite if they touch a hot heating element and you could be burned.
- Use only dry potholders. Moist or damp potholders on hot surfaces may result in burns from steam. Do not let potholder touch hot heating elements. Do not use a towel or bulky cloth for a potholder. It could catch on fire.
- Keep oven vents unobstructed.

continued on next page

## Understanding Oven Safety

- Do not heat unopened containers. They could explode. The hot contents could cause burns and container particles could cause injury.
- Do not store flammable materials on or near the oven. The fumes can create an explosion and/or fire hazard.
- Do not repair or replace any part of the oven unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Disconnect the electrical supply before servicing the oven.

### **When using the oven**

- Always position oven rack(s) in desired location while oven is cool. If a rack must be removed while oven is hot, do not let potholder contact hot heating element in oven.
- Use care when opening oven door. Let hot air or steam escape before removing or replacing food.
- Small amounts of formaldehyde and carbon monoxide are given off in the Self-Cleaning cycle from

fiberglass insulation and food decomposition. Significant exposure to these substances can cause cancer or reproductive harm. Exposure can be minimized by venting with a hood or open window and wiping out excess food spills prior to self-cleaning.




- Do not use oven cleaners. No commercial oven cleaner or oven liner protective coating of any kind should be used in or around any part of the oven.
- Before self-cleaning the oven, remove broiler pan, broiler grid, oven racks and other utensils. Do not use your oven to clean miscellaneous parts unless you are instructed to do so in this Use and Care Guide.
- Do not clean door gasket. It is essential for a good seal. Care should be taken not to rub, damage or move the gasket. Clean only parts recommended in this Use and Care Guide.

**– SAVE THESE INSTRUCTIONS –**

# Getting To Know Your Oven

This section tells you what features your oven has and where they are located. Please review this information before using your oven.

## Feature Locations

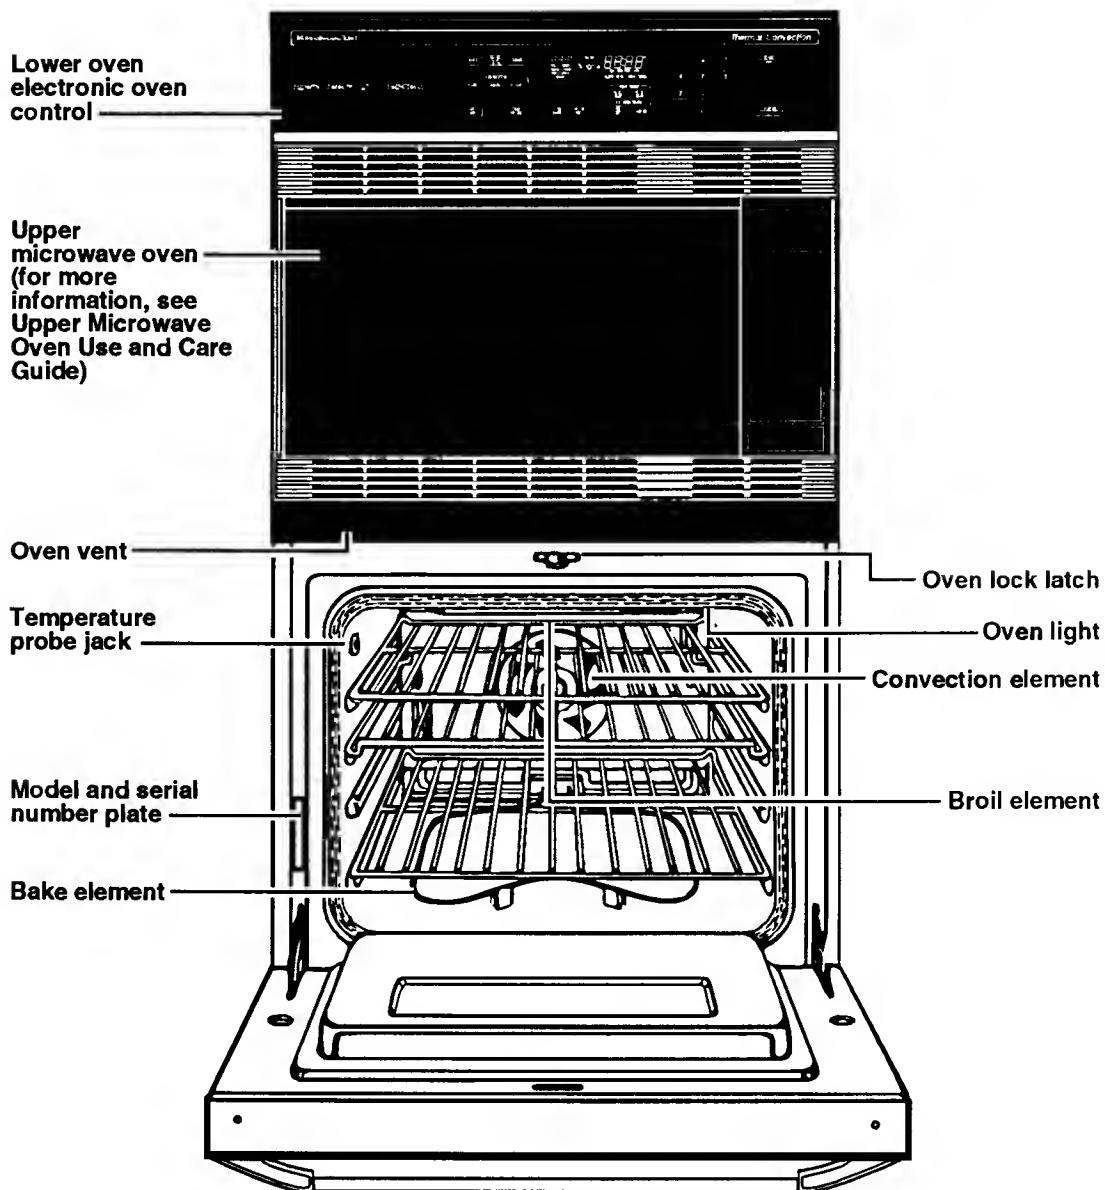

# Using Your Oven

This section tells you, step by step, how to operate all oven functions controlled by the electronic control. Carefully follow these instructions, along with the cooking tips, for successful use of your oven.


## IN THIS SECTION

### Using The Electronic Oven

Control .....	6
Setting The Clock .....	9
Using The Kitchen Timer .....	9
Baking Or Convection Baking ....	11
Roasting .....	13
Adjusting Oven Temperature .....	14
Using The Temperature Probe ....	16

Using Auto Set .....	18
Broiling .....	19
Convection Broiling .....	21
Timed Cooking .....	23
Dehydrating .....	26
Proofing Bread .....	28
Cooking Tips .....	29

## Using The Electronic Oven Control

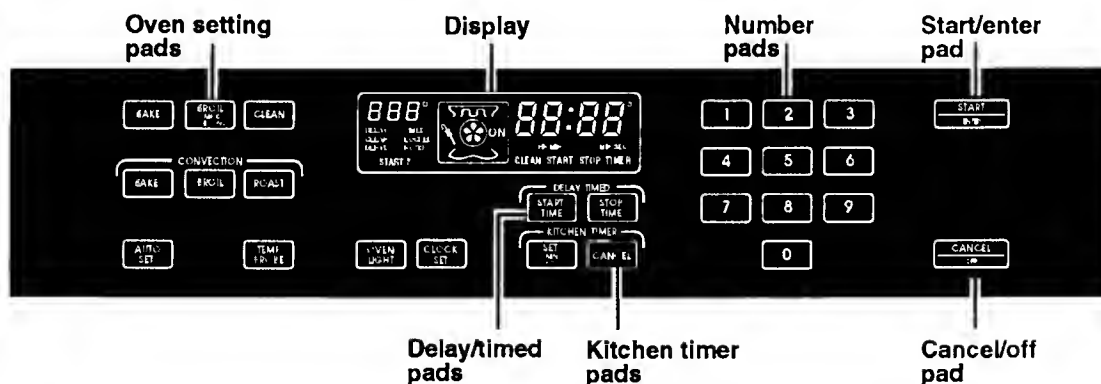

### Display/Clock

- When you first connect the oven to power, a tone will sound and the display will show "88:88". If, after you set the clock (page 9), the display again shows "88:88", your electricity was off for a while. Reset the clock.
- The time display will show "Err" and three short tones will sound if a time or temperature is incorrectly entered.

### Starting An Operation



After programming a function, you must press the Start/Enter pad to start the function. If you do not press the Start/Enter pad within 5 seconds of programming, "START?" will show in the display as a reminder.

## Canceling An Operation



The Cancel/Off pad will cancel any command pad, except for the Clock Set and Kitchen Timer pads. When you press the Cancel/Off pad, the large display will show the time of day.

## Changing Audible Signals

Audible signals tell you if a function is entered correctly or not. They also tell you when a cycle is completed.

**To shut off audible signals during programming:**

**PRESS  
and hold  
for 4  
seconds**



**To shut off all signals except for the end-of-timer tone:**

**PRESS  
and hold  
for 4  
seconds**



**To change the end-of-timer tone to a four-second tone:**

**PRESS  
and hold  
for 4  
seconds**








A short tone will sound to tell you the signals have been changed.  
Repeat to turn the signals back on.

# Using Your Oven

## Oven Settings

This chart tells you when to use each setting. It also explains, both in pictures and in words, what elements heat up for each setting.

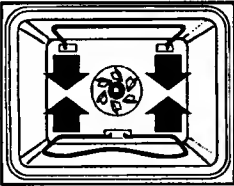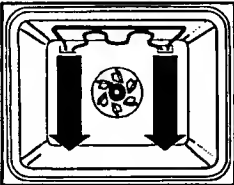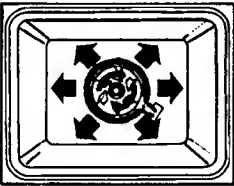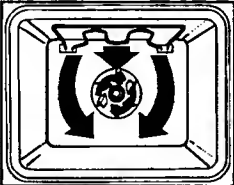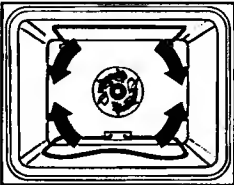SETTING	DIAGRAM	SETTING INFORMATION
<b>BAKE</b> Use this setting for baking and heating casseroles.		<ul style="list-style-type: none"> <li>• The bottom element and outer top element heat up.</li> <li>• During baking, the elements will turn on and off to maintain the oven temperature.</li> </ul>
<b>BROIL (MAXI/ECONO)</b> Use this setting for broiling regular-sized and smaller cuts of meat, poultry, and fish.		<ul style="list-style-type: none"> <li>• Both top elements heat during Maxi Broil. (Maximum browning coverage)</li> <li>• Only the inner element heats up during Econo Broil. (Browning coverage in center only)</li> </ul>
<b>CONVECTION BAKE</b> Use this setting for foods which require gentle heating and for baking breads and cakes. Use also when baking large quantities of food on more than one oven rack.		<ul style="list-style-type: none"> <li>• For faster preheating, all elements heat up until oven reaches desired temperature. After preheat, only the rear element heats up.</li> <li>• For even heating, the fan at the back of the oven circulates air in the oven cavity.</li> </ul>
<b>CONVECTION BROIL</b> Use this setting for broiling thick cuts of meat.		<ul style="list-style-type: none"> <li>• The top elements heat up.</li> <li>• For even heating, the fan at the back of the oven circulates air in the oven cavity.</li> </ul>
<b>CONVECTION ROAST</b> Use this setting for roasting and baking on one rack.		<ul style="list-style-type: none"> <li>• The bottom element and outer top element heat up.</li> <li>• For even heating and faster cooking, the fan at the back of the oven circulates air in the oven cavity.</li> </ul>
<b>CLEAN</b>		Use this setting for self-cleaning only.



## Setting The Clock

### 1. Choose Clock Set.

PRESS

CLOCK  
SET

*Example:*  
YOU SEE



### 2. Set Time.

*Example:*  
PRESS



*Example:*  
YOU SEE



### 3. Start clock.

PRESS



If the time has not been entered correctly, three short tones will sound and "Err" is displayed for 1 second. The previous display then reappears. Repeat Steps 1, 2, and 3 to reenter the time of day.

## Using The Kitchen Timer

The Kitchen Timer does not start or stop the oven. It works like a regular kitchen timer. It can be set in hours and minutes up to 11 hours, 59 minutes or in minutes and seconds up to 11 minutes, 59 seconds.

### 1. Choose Kitchen Timer.

PRESS  
*once to*  
count down  
minutes and  
seconds



YOU SEE



continued on next page

## Using Your Oven

**PRESS  
twice to  
count down  
hours and  
minutes**

**SET**  
•MIN  
••HR

**SET**  
•MIN  
••HR

**YOU SEE**



### 2. Set time.

**Example:  
PRESS**



**Example:  
YOU SEE**



### 3. Start Kitchen Timer.

**PRESS**



The Kitchen Timer will begin counting down immediately after you press the Start/Enter pad.

When time is up, you will hear a single tone that sounds every 5 seconds.

**PRESS  
to turn off tone**

**KITCHEN/  
TIMER**

**CANCEL**

**YOU SEE**



**NOTE:** To change the end-of-timer tone to a four-second tone, press and hold the Kitchen Timer Set pad for 4 seconds. A short tone will sound to tell you the tone has been changed.

### To Cancel The Kitchen Timer:

**PRESS**


**KITCHEN/  
TIMER**

**CANCEL**

## Baking Or Convection Baking

### 1. Position racks.

For correct rack placement, see “Rack Positions” on page 29 and “Rack Placement” chart on page 30.

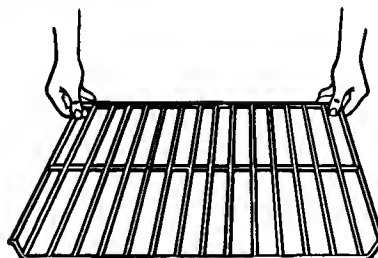


### 2. Choose setting.

PRESS

BAKE

YOU SEE

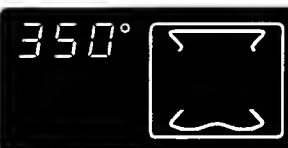

OR

CONVECTION

PRESS

BAKE

YOU SEE



### 3. Set temperature (optional).

Do this step if you want to set a temperature other than 350°F (for Bake) or 325°F (for Convection Bake).

*Example:*  
PRESS

3

7

5

(See a reliable cookbook or the Convection Oven Cook Book for temperature recommendations.)

*Example  
For Bake:  
YOU SEE*




## Using Your Oven

### 4. Preheat oven.

PRESS



*Example  
For Bake:*  
YOU SEE

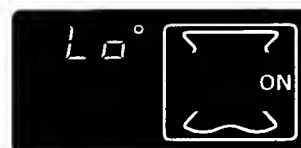

#### NOTES:

- If the door Lock Lever is latched when you try to bake, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with baking.
- After the temperature reaches 170°F, the red display will show the actual oven temperature at each 5° increase and stop at the set temperature. **To see the set temperature before it is reached,** press the command pad you used to choose the cook setting. The set temperature will be displayed for 5 seconds.

---

### 5. Put food in oven.

**NOTE:** If you want to change the baking temperature after baking has begun, repeat Steps 2, 3, and 4.

---

### 6. After cooking, turn off oven.

PRESS




*Example:*  
YOU SEE  
(time of day)



## Roasting

### 1. Prepare oven.

Position the rack properly. For correct rack placement, see "Rack Positions" on page 29. Place food in the oven. For large roasts and turkeys, place rack in position 1 (closest to oven bottom).

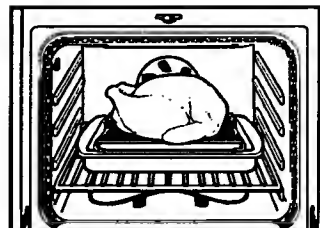

### 2. Choose setting.

PRESS **CONVECTION**  
**ROAST**

YOU SEE



### 3. Set temperature (optional).

Do this step if you want to set a temperature other than 300°F.

*Example:*  
PRESS



(See the Convection Oven Cook Book for temperature recommendations.)


*Example:*  
YOU SEE



### 4. Start oven.

PRESS **START**  
**ENTER**

*Example:*  
YOU SEE

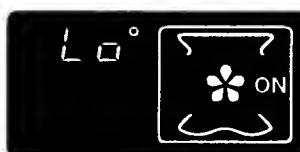

#### NOTES:

- If the door Lock Lever is latched when you try to roast, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with roasting.
- After the temperature reaches 170°F, the red display will show the actual oven temperature at each 5° increase and

stop at the set temperature. **To see the set temperature before it is reached,** press the Convection Roast pad. The set temperature will be displayed for 5 seconds.

- If you want to change the roasting temperature after roasting has begun, repeat Steps 2, 3, and 4.

## Using Your Oven

### 5. After cooking, turn off oven.

PRESS



*Example:*  
YOU SEE  
(time of  
day)



## Adjusting Oven Temperature

Oven temperature controls will gradually shift after years of use. So, even though your new oven is properly adjusted to provide accurate temperatures, it may cook faster or slower than your old oven.

If, after using the oven for a period of time, you are not satisfied with the temperature settings, you can adjust them by following these steps:

### 1. Choose Bake setting.

PRESS  
and hold  
for 4 seconds



*Example:*  
YOU SEE



Release the Bake pad when a number appears in the temperature display and you hear a beep.

"0" (the setting shown) is set at the factory.

### 2. Set new offset temperature.

PRESS



*Example:*  
YOU SEE

Adjustment 5°F cooler:



Each time you press the Bake pad, the displayed temperature will increase by 5°F. **To decrease the temperature**, hold down the Bake pad until the display goes past 35°. At that point the display will return to 0 and will then decrease 5°F for every time you press the Bake pad. You can set the temperature offset adjustment as low as -35°F or as high as +35°F. (To determine the amount of adjustment needed, see the chart on page 15.)

## 3. Enter the adjustment.

PRESS



*Example:*  
**YOU SEE**  
(time of day)



### NOTES:

- The control will “remember” the selected offset even after the power has been interrupted or lost.
- DO NOT measure oven temperature with a thermometer. Opening the oven door will lower the oven temperature and give you an inaccurate reading. Also, the thermometer temperature reading will change as your oven cycles.

## How To Determine The Amount Of Adjustment Needed

The following chart tells you how much to adjust the offset temperature to get the desired cooking results. You can determine cooking results by amount of browning, moistness, and rising times for baked foods.

TO MAKE FOOD ...	ADJUST BY THIS NUMBER OF DEGREES
A little more done	+5 to +10
Moderately more done	+15 to +20
Much more done	+25 to +35
A little less done	- 5 to -10
Moderately less done	- 15 to - 20
Much less done	- 25 to - 35


## Using Your Oven

### Using The Temperature Probe

The Temperature Probe is the most accurate guide to the degree of doneness of meat. Use it when baking, roasting any type of meat or poultry, or cooking casseroles with liquid.

#### 1. Insert probe into food.

Insert the probe into the center of the thickest portion of meat or into the inner thigh or breast of poultry, away from fat or bone.

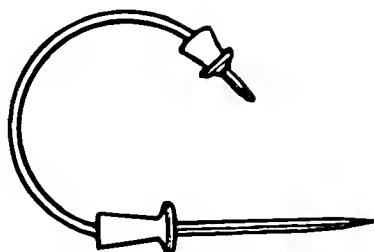


#### 2. Put food in oven.

Place meat on the convection roasting rack, place rack on broiler pan, and place pan in the center of the oven.



#### 3. Connect probe to oven.

Open the Temperature Probe cover located on the left side of the oven wall. Insert plug into jack. (Keep the top of the probe as far as possible from the heat source.)

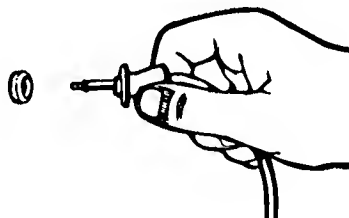

#### 4. Close oven door.

#### 5. Choose Temperature Probe setting.

PRESS

TEMP  
PROBE

YOU SEE



#### 6. Set temperature (optional).

Do this step if you want to set an internal food temperature (from 100°F-200°F) other than 160°F.

**Example:**  
PRESS



**Example:**  
YOU SEE



(See a reliable cookbook or the Convection Oven Cook Book for internal food temperature recommendations.)



## 7. Choose cook setting.



**NOTE:** Do not use the Temperature Probe when broiling or convection broiling.

## 8. Set temperature (optional).

Do this step if you want to set an oven temperature other than the one displayed.

**Example:**  
PRESS



(See a reliable cookbook or the Convection Oven Cook Book for oven temperature recommendations.)

## 9. Start oven.

PRESS



**Example  
For Bake:  
YOU SEE**



### NOTES:

- After the food temperature reaches 100°F, the large display will show the actual food temperature at each 5° increase and stop at the set temperature. Four short tones will sound when food reaches the set temperature. The oven then shuts off.
- If you want to change the probe temperature after cooking has begun, repeat Steps 5, 6, and 9.

**Example:  
YOU SEE**

If probe is not plugged in:



Three short tones will also sound.

## 10. After cooking, unplug probe.

One short tone will sound every minute to remind you cooking is done, until you unplug the Temperature Probe.

## 11. Remove food from oven.

(This prevents overcooking.)

## 12. Clean probe.

Use a soapy sponge and dry thoroughly. Use a plastic scouring pad to remove cooked-on foods. You can also clean the probe in a dishwasher.

## ⚠ WARNING

### Burn Hazard

Oven, probe and probe cover will be hot. Use an oven mitt or a potholder to remove the probe.

Failure to do so could result in burns.

## Using Auto Set

Auto Set lets you choose from among ten preset oven cooking cycles. These cycles store commonly used cooking times, cooking temperatures and probe

temperature settings. Auto Set saves you time by limiting the number of pads you have to press when cooking at a favorite setting.

### 1. Place food in cold oven.

If you need the Temperature Probe for your cycle (settings 5-8), insert probe into food. (Follow Steps 1-4 in "Using The Temperature Probe" on page 16.)

### 2. Set Auto Set cycle.

PRESS

AUTO  
SET

YOU SEE

A -

Press desired Number pad.

*Example:*  
PRESS

1

*Example:*  
YOU SEE

A - 1

(Use the "Auto Set Chart" on page 19 as your guide for selecting the correct cycle.)

#### NOTES:

- You can change the Auto Set cycle any time before pressing the Start/Enter pad by repeating Step 2.
- The cooking setting, time, or probe temperature will be displayed before you press the Start/Enter pad.

### 3. Start oven.

PRESS

START  
ENTER

*Example For  
Auto Set 5:*  
YOU SEE

Lo°  Lo°

**NOTE: Cycles 1-4, 9, 0:** To see the time when the Auto Set cycle will end, press the Stop Time pad. **Cycles 5-8:** To see the internal food temperature selected, press the Temp Probe pad.

*Example:*  
YOU SEE

End 12:00

**When the Auto Set cycle is done, "End"** and time of day will show in the display. Four tones will sound, followed by one short tone every minute until you open the door, remove the probe, or press the **Cancel/Off** pad.

## Auto Set Chart (see Auto Set Guide Meal Planner for explanation of Meals #1-4)


NUMBER	MODE	OVEN TEMP	TIME OR PROBE TEMP	FOOD
1	Convection bake	350°F	45 min	Meal #1
2	Convection bake	350°F	1 hr	Meal #2
3	Convection bake	350°F	1 hr 15 min	Meal #3/Baked potatoes
4	Convection bake	375°F	55 min	Meal #4
5	Convection roast	300°F	140°F	Beef roast rare
6	Convection roast	300°F	160°F	Beef roast medium
7	Convection roast	300°F	170°F	Beef roast well Pork roast Meat loaf
8	Convection bake	325°F	150°F	Casseroles
9	Convection bake	325°F	3 hr	Pot roast with vegetables—3 lbs
0	Convection roast	400°F	18 min	Pizza

## Broiling

**NOTE:** Preheating is not necessary when broiling.


### 1. Position rack.

See "Broiling Rack Positions" on page 32 for recommended rack positions.

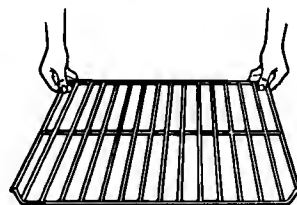

### 2. Put food in oven.

Place food on grid in broiler pan and place in center of the oven rack.

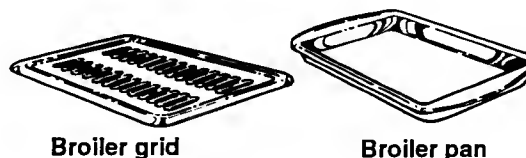


Broiler grid

Broiler pan

### 3. Position door.

Close the door to the Broil Stop position (open about 6 inches [15.2 cm]). The door will stay open by itself.

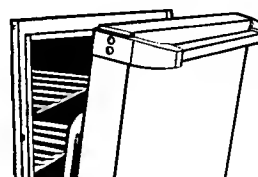

# Using Your Oven


## 4. Choose broil setting.

**PRESS**  
*once for Maxi Broil*

**BROIL**  
•MAXI  
•ECONO

**YOU SEE**

**Maxi broil:**

500° 

**OR**


**PRESS**  
*twice For Econo Broil*

**BROIL**  
•MAXI  
•ECONO

**BROIL**  
•MAXI  
•ECONO

**YOU SEE**

**Econo broil:**

500° 

## 5. Set temperature (optional).


Do this step if you want to use Variable Temperature Broiling (see page 21).

**Example:**  
**PRESS**

3 2 5


**Example:**  
**YOU SEE**

**Maxi broil:**

325° 

**Example:**  
**YOU SEE**

**Econo broil:**

325° 


## 6. Start oven.

**PRESS**

**START**  
ENTER


**Example:**  
**YOU SEE**

**Maxi broil:**

325°  ON

**Example:**  
**YOU SEE**

**Econo broil:**

325°  ON

### NOTES:

- Leave the door partly open whenever using the oven to broil. This allows the oven to maintain proper temperatures.
- If the door Lock Lever is latched when you try to broil, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with broiling.
- If you want to change the broiling temperature after broiling has begun, repeat Steps 4, 5, and 6.

### 7. When broiling is done, turn off oven.

PRESS



*Example:*  
YOU SEE  
(time of day)



## Variable Temperature Broiling


- If food is cooking too fast or you want the food to broil slower from the start, set the broil temperature between 170°F and 325°F (77°C and 163°C). These temperature settings allow the broil heating element to cycle and to slow cooking. The lower the temperature, the slower the cooking.
- Fish and chicken are some foods that may cook better if you use lower broiling temperatures.

## Convection Broiling

Convection broiling is actually high-temperature convection roasting. Use this setting when broiling thick cuts of meat. Results are similar to those you get when using a rotisserie.

### 1. Position rack.

See "Broiling Rack Positions" on page 32 for recommended rack positions.

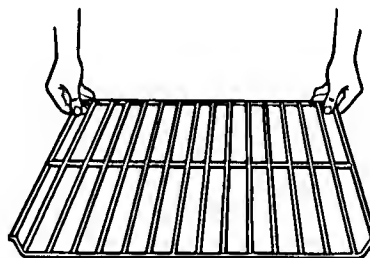


### 2. Put food in oven.

Place food on grid in broiler pan and place in center of the oven rack. Turn the pan so the long side is parallel to the oven door for the most even heat and the best airflow.

### 3. Close door.

**NOTE:** Do not try to convection broil with the door open. The fan will not operate.

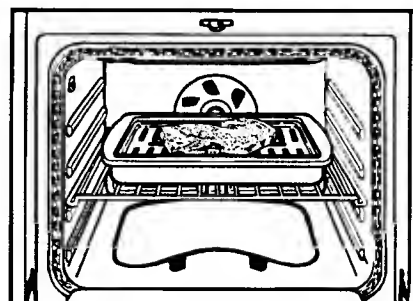

# Using Your Oven

## 4. Choose Convection Broil setting.

PRESS **CONVECTION**  
**BROIL** YOU SEE



## 5. Set temperature (optional).

Do this step if you want to set a temperature (up to 450°F) other than 450°F.

*Example:*  
PRESS



*Example:*  
YOU SEE



(See the Convection Oven Cook Book for temperature recommendations.)

## 6. Start oven.

PRESS



*Example:*  
YOU SEE



### NOTES:

- If the door Lock Lever is latched when you try to convection broil, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with broiling.
- If you want to change the convection broiling temperature after broiling has begun, repeat Steps 4, 5 and 6.

## 7. When broiling is over, turn off oven.

PRESS




*Example:*  
YOU SEE  
(time of day)



## Timed Cooking

The electronic clock/oven control will turn the oven on and off at times you set ... even when you are not around.


Delayed time cooking is ideal for foods which do not require a preheated oven, such as meats and casseroles. **Do not use delayed time cooking for cakes, cookies, etc. – undercooking will result. Before using timed cooking, make sure the clock is set to the correct time of day.** (See "Setting The Clock" on page 9.)

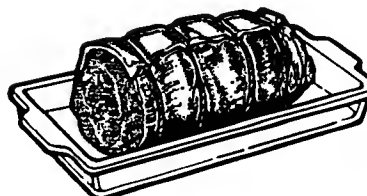

### To Start Baking/Roasting Now and Stop Automatically:

#### 1. Prepare oven.

Position the oven rack(s) properly and place the food in the oven. For correct rack placement, see "Rack Positions" on page 29 and "Rack Placement" chart on page 30.

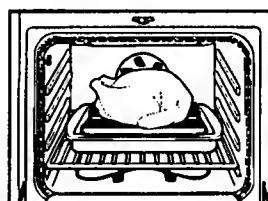

#### 2. Choose setting.

PRESS **BAKE** OR **CONVECTION BAKE** OR **CONVECTION ROAST**

*Example For  
Convection  
Roast:  
YOU SEE*



#### 3. Set temperature (optional).

Do this step if you want to set a temperature other than the one displayed.

*Example:  
PRESS*

**3 2 5**

*Example:  
YOU SEE*



(See a reliable cookbook or the Convection Oven Cook Book for temperature recommendations.)

#### 4. Set stop time.

PRESS

**STOP  
TIME**

*Example:  
YOU SEE  
(time of  
day)*



continued on next page

# Using Your Oven

*Example:*  
PRESS



*Example:*  
YOU SEE



## 5. Start oven.

PRESS



**NOTE:** If the door Lock Lever is latched when you try to bake/roast, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with baking/roasting.

When baking/roasting is done, "End" and the time of day will show in the display. Four tones will sound, followed by one short tone every minute until you open the door or press the Cancel/Off pad.


*Example:*  
YOU SEE  
(time of day)



## To Delay Start and Stop Automatically:

### 1. Prepare oven.

Position the oven rack(s) properly and place the food in the oven. For correct rack placement, see "Rack Positions" on page 29 and "Rack Placement" chart on page 30.

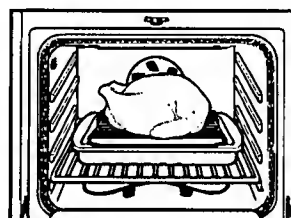

### 2. Choose setting.



*Example For*  
*Convection*  
*Roast:*  
YOU SEE



### 3. Set temperature (optional).

Do this step if you want to set a temperature other than the one displayed.

*Example:*  
PRESS



*Example:*  
YOU SEE



(See a reliable cookbook or the Convection Oven Cook Book for temperature recommendations.)



# Using Your Oven

## 4. Set start time.

**PRESS** **START TIME**

*Example:*  
**PRESS** **1** **0** **0**

*Example:*  
**YOU SEE** (time of day)



*Example:*  
**YOU SEE**




## 5. Set stop time.


**PRESS** **STOP TIME**

*Example:*  
**PRESS** **3** **0** **0**

*Example:*  
**YOU SEE** (time of day)



 
*Example:*  
**YOU SEE**



## 6. Complete entry.


**PRESS** **START**  
**ENTER**

*Example:*  
**YOU SEE** (time of day)



*Example:*  
**YOU SEE**

**When start time is reached:**



**NOTE:** If the door Lock Lever is latched when you try to bake/roast, the display will show "door" and a tone will sound every 5 seconds. You must unlatch the door in order to proceed with baking/roasting.

**When baking/roasting is done, "End"** and the time of day will show in the display. Four tones will sound, followed by one short tone every minute until you open the door or press the Cancel/Off pad.

*Example:*  
**YOU SEE** (time of day)



## Using Your Oven

### To Cancel Timed Cooking Settings:

PRESS

CANCEL

OFF

Example:  
YOU SEE  
(time of  
day)



#### ⚠ WARNING

To avoid sickness and food waste when timed baking/roasting:

- Do not let most UNFROZEN food stand for more than two hours before cooking starts.
- Do not allow food to remain in oven for more than two hours after the end of cooking cycle.

**NOTE:** Do not use foods that will spoil while waiting for cooking to start. Such foods are: dishes with milk or eggs, cream soups and cooked meats or fish. Also, foods containing baking powder or yeast will not rise properly when cooked using delay start.

---

## Dehydrating

You can use your Thermal-Convection™ oven to dehydrate fruits and vegetables.

### 1. Prepare food.

Prepare foods as recommended in recipe.

### 2. Arrange food on drying racks.

Racks are not included with oven.  
Contact a local store handling specialty cooking utensils.


**NOTE:** To learn more about dehydration, see the Convection Oven Cook Book provided with your oven.

---

### 3. Position door.

To allow moisture to escape, insert a wooden spoon or wooden spool to provide a one-inch gap between the frame and the door.

**NOTE:** The door must be closed further than the Broil Stop position. If the door is open more than one inch, the convection fan may shut off. This prevents dehydration.

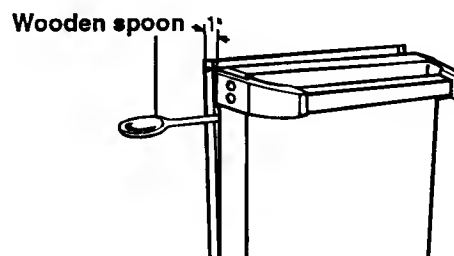

## Using Your Oven

### 4. Choose Convection Bake setting.

PRESS  
and hold  
for two  
seconds

CONVECTION

BAKE

*Example:*  
YOU SEE



### 5. Set temperature (optional).

Do this step if you want to set a temperature (from 100°F to 200°F) other than 140°F.

*Example:*  
PRESS



*Example:*  
YOU SEE



### 6. Start oven.

PRESS



*Example:*  
YOU SEE



**NOTE:** If you want to change the dehydrating temperature after dehydrating has begun, repeat Steps 4, 5 and 6.

### 7. When dehydrating is done, turn off oven.

PRESS



*Example:*  
YOU SEE  
(time of  
day)



## Using Your Oven

### Proofing Bread

You can use your Thermal-Convection™ oven to proof bread. For more information, see the Convection Oven Cook Book provided with your oven.

#### 1. Put bread in oven.

**NOTE:** Be sure to close the door.

#### 2. Choose Convection Bake setting.

PRESS  
and hold for  
two seconds

CONVECTION

BAKE

YOU SEE



---

#### 3. Set temperature.

Set temperature to 100°F.

PRESS



YOU SEE



---

#### 4. Start oven.

PRESS



YOU SEE



---

#### 5. When proofing is done, turn off oven.

PRESS



Example:  
YOU SEE  
(time of  
day)



## Cooking Tips

### Baking/Convection Baking Tips


The hot air must circulate around the pans in the oven for even heat to reach all parts of the oven. This results in better baking.

#### For Best Air Circulation:

- **Place** the pans so that one is not directly over the other.



- **For best results**, allow 1½ to 2 inches of space around each pan and between pans and oven walls. There must be a minimum space of 1 inch.
- **When baking with one pan**, place pan in the center of the oven rack.

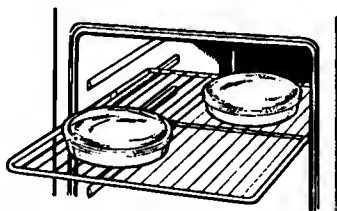


- **When baking with two pans**, place pans in opposite corners of the oven rack.

#### NOTES:

- "Oven peeking" may cause heat loss, longer cooking times and unsatisfactory baking or roasting results. Rely on your timer.
- Do not allow pans to touch the heat sensor on the left wall near the back. Poor baking may result.

### Rack Positions

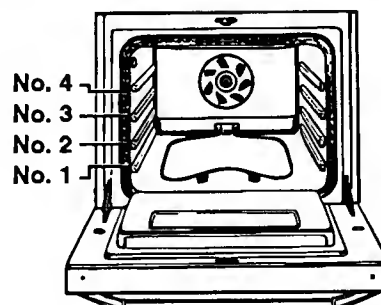

Your oven has three racks. Two racks are straight and the third is offset (raised). The shape of the offset rack helps you space racks better.

There are four rack positions. Rack position 4 is the highest position, or farthest from the bottom of the oven. Rack position 1 is the lowest position, or closest to the bottom of the oven.

### ⚠ WARNING

#### Personal Injury Hazard

- Always position oven rack(s) in desired location before turning oven on.
- If you must move rack(s) while oven is hot, use potholders or oven mitts to protect hands.
- Do not let potholder or oven mitt touch hot heating element.

Failure to follow the above precautions may result in personal injury.

## Using Your Oven

### Baking (Bake Pad) Tips

#### For Proper Cooking, Follow These Guidelines:

- **When using one rack**, place the rack so the top of the food will be centered in the oven.
- **When using more than one rack**, use the Convection Bake setting.
- **Use only one** cookie sheet in the oven at one time when using the Bake setting.

#### Rack Placement For Specific Foods:

(For rack positions, see "Rack Positions" on page 29.)

FOOD	RACK POSITION
Frozen pies	1 or 2
Angel and bundt cakes, most quick breads, yeast breads, casseroles, meats	2
Cookies, biscuits, muffins, cakes, nonfrozen pies	2 or 3


### Using Aluminum Foil In The Oven (For Thermal Baking)

#### ⚠ WARNING

##### Electrical Shock and Fire Hazard

Do not allow foil to touch the heating elements because it will damage them and could result in electrical shock or fire hazard.

Use aluminum foil to catch spillovers from pies or casseroles.

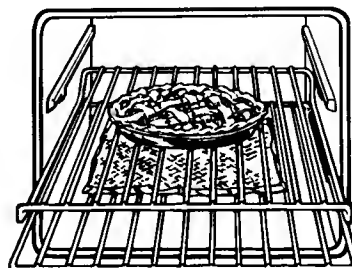

- **Place** the foil on the oven rack below the rack with the food. Turn foil edges up and make sure foil is about 1 inch (3 cm) larger all around than the dish holding the food.
- **Do not cover** the entire rack with aluminum foil. It will reduce air circulation and cause poor cooking results.
- **Do not line** oven bottom or entire oven rack with foil or other liners. Poor baking will result.


### Convection Baking (Convection Bake Pad) Tips

- **Do not use** aluminum foil when convection baking. Aluminum foil may block airflow.
- **Reduce** recommended recipe oven temperature by approximately 25°F. See recipe adaption chart in the Convection Oven Cook Book for recommended temperatures.
- **For most recipes**, you can reduce convection baking time compared to standard baking times. See recipe adaption chart or convection baking chart in the Convection Oven Cook Book for recommended baking times.

**NOTE:** Cooking time may be longer when you use more than one rack.

## Using Your Oven


- **When baking on two or three racks,** use the Convection Bake setting for more even results. (You can, however, use only one rack when Convection Baking.)

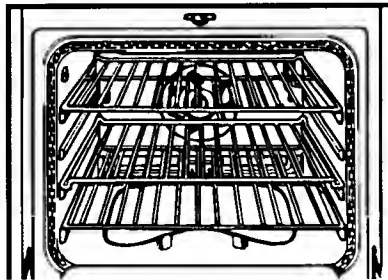

- **To use three racks during convection baking,** place one straight rack in position 4 (the highest position), the other straight rack in position 1 (the closest to the oven bottom), and the offset rack in position 2. This allows all three racks to be an equal distance apart for better baking.
- **Stagger** cake pans or other utensils in opposite directions on each rack when three racks are used.

### Roasting Tips

- **Spatter can be reduced** by lining the bottom of the roasting pan with lightly crushed aluminum foil.
- **Use an accurate meat thermometer or temperature probe** (see page 16) to determine when meat has reached desired degree of doneness. Insert the thermometer or probe into the center of the thickest portion of the meat or inner thigh or breast of poultry. For an accurate reading, the tip of the thermometer or probe should not touch fat, bone or gristle.
- **After reading the thermometer once,** push it further into the meat ½ inch or more and read again. If the temperature drops, return the meat to the oven for more cooking.
- **Check pork and poultry** with a thermometer in 2-3 places to ensure adequate doneness.
- **Poultry and roasts will be easier to carve** if loosely covered with foil and allowed to stand 10-15 minutes after removal from the oven.
- **You can reduce** roasting times and temperatures for most standard recipes when using the Convection Roast setting. See recipe adaption chart or convection roasting chart in the Convection Oven Cook Book for recommended roasting times and temperatures.

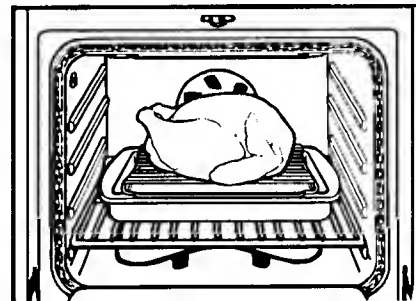

- **Use the convection roasting rack** on the broiler pan (both included with your oven). (The convection roasting rack rests on the broiler pan, not inside it.) The long side of the rack should be parallel with the oven door for best heat distribution and airflow.

## Using Your Oven

### Broiling Tips

- **Always start** broiling with a cold broiler pan for even results.
- **To retain more natural juice**, do not pierce meat with a fork.
- **Trim** the outer layer of fat from steaks and chops.
- **Silt** fatty edges to prevent meat from curling during broiling.
- **Use a nonstick cooking spray or vegetable oil** on the broiler pan and grid when broiling fish to prevent sticking.


### Broiling Rack Positions

RACK POSITION FROM BOTTOM	TYPE OF FOOD/ DONENESS
4	Hamburger patties and thin steaks, ½" thick or less
3	Quickly searing food, rare and medium steaks, medium patties, ham slices, fish steaks, frankfurters
2	Well-done steaks and patties, lamb chops, split chicken, pork steaks and chops, whole fish

### ⚠ WARNING

#### Fire Hazard

- Place meat the correct distance from the element. Meat placed too close to the element may spatter, smoke, burn or catch fire during broiling.
- To ensure adequate grease drainage, do not use cookie sheets or similar pans for broiling. Also, covering the broiler grid with foil is not recommended. Poor drainage of grease may result in fire. If foil is used, cut slits in foil to line up with all openings in broiler grid. Grease can then drain away and cool in pan.

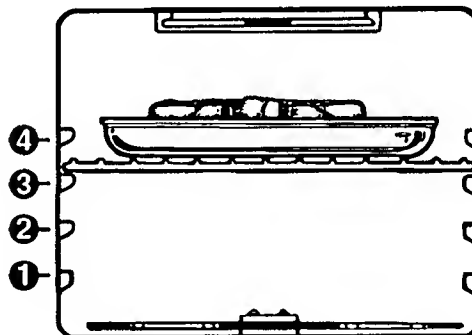



# Caring For Your Oven

## Cleaning Your Oven And Controls

PART	WHAT TO USE	HOW TO CLEAN
<b>Control panel</b>	Sponge and warm, soapy water <b>OR</b> Paper towel and spray glass cleaner	<ul style="list-style-type: none"> <li>Wash, rinse and dry thoroughly. DO NOT USE steel wool or abrasive cleaners. They may damage the finish. DO NOT SPRAY cleaner directly on panel. Apply cleaner to paper towel.</li> </ul> <b>NOTE:</b> Make sure you have not turned the oven on when cleaning panel. If you have, press the Cancel/Off pad.
<b>Exterior surfaces</b> (other than control panel)	Sponge and warm, soapy water	<ul style="list-style-type: none"> <li>Wash, rinse and dry thoroughly. USE nonabrasive, plastic scrubbing pad on heavily soiled areas.</li> <li>Do not use abrasive or harsh cleansers. They may damage the finish.</li> </ul>
<b>Broiler pan and grid</b> (clean after each use)	Steel-wool pad and warm, soapy water	<ul style="list-style-type: none"> <li>Wash, rinse and dry thoroughly. DO NOT CLEAN in Self-Cleaning cycle.</li> </ul>
<b>Oven racks</b>	Steel-wool pad and warm, soapy water <b>OR</b> The Self-Cleaning cycle	<ul style="list-style-type: none"> <li>Wash, rinse and dry thoroughly.</li> </ul> <b>OR</b> <ul style="list-style-type: none"> <li>Leave in oven during Self-Cleaning cycle.</li> </ul> <b>NOTE:</b> Racks will permanently discolor and become harder to slide if left in oven during the Self-Cleaning cycle. Apply a small amount of vegetable oil to the side rungs to aid sliding.
<b>Oven door glass</b>	Paper towel and spray glass cleaner <b>OR</b> Warm, soapy water and a nonabrasive, plastic scrubbing pad	<ul style="list-style-type: none"> <li>Make sure oven is cool.</li> <li>Follow directions provided with the cleaner.</li> <li>Wash, rinse and dry thoroughly.</li> </ul>
<b>Oven cavity</b>	Self-Cleaning cycle	<ul style="list-style-type: none"> <li>See "Using The Self-Cleaning Cycle" on pages 36-39.</li> </ul>

# Using And Replacing The Oven Light

The oven light will come on when you open the oven door. To turn the light on when the oven door is closed, **press** the Oven Light pad on the control panel. **Press** the pad again to turn off the light.


## Replacing the oven light:

### ⚠ WARNING

#### Electrical Shock and Personal Injury Hazard

- Make sure oven and light bulb are cool and power to the range has been turned off before replacing the light bulb. Failure to do so could result in electrical shock or burns.
- The bulb cover must be in place when using the oven. The cover protects the bulb from breaking, and from high oven temperatures. Because bulb cover is made of glass, be careful not to drop it. Broken glass could cause injury.

1. **Disconnect** appliance at main power supply.

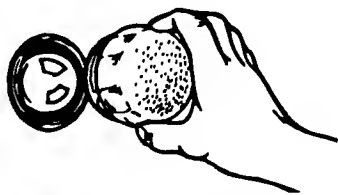

2. **Remove** the glass bulb cover in the back of the oven by screwing it out counterclockwise.

3. **Remove** the light bulb from its socket. **Replace** the bulb with a 40-watt appliance bulb.

4. **Replace** the bulb cover by screwing it in clockwise. **Reconnect** appliance at main power supply.

**NOTE:** The oven light will not work during the Self-Cleaning cycle.

## Changing Optional Oven Door Fronts

The oven door glass can be changed to match your kitchen decor. The following door glass kits are available from your KitchenAid dealer:

- White Glass 27" (Kit No. 3179501)
- Almond Glass 27" (Kit No. 3179503)
- Brushed Stainless Steel 27" (Kit No. 3181993)

## Removing And Replacing The Oven Door

The oven door can be removed to change optional oven door front. **Do not** remove door for cleaning.

### **⚠ WARNING**

#### **Personal Injury Hazard**


- Oven door is heavy. Use both hands to remove the oven door.
- Grasp only the sides of the oven door. Do not use any portion of the front frame or trim for lifting.

Failure to grasp the oven door properly could result in personal injury or product damage.

### **To Replace:**



### **To Remove:**

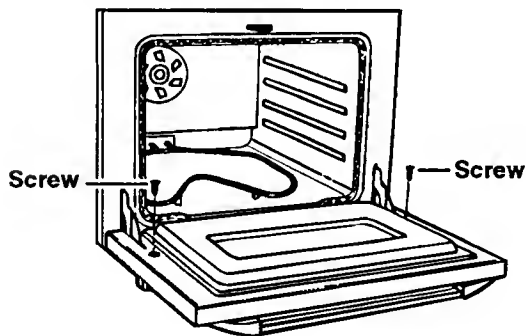


1. **Grasp** door firmly on both sides. **Slide** over the hinges. **Push** the door down and in to replace.
2. **Open** the door slightly past the Broil Stop position and **push** it down to make sure the door is completely installed.
3. **Open** the door completely. **Replace** the two oven door screws.
4. **Close** and **open** the door slowly to make sure it is replaced properly.

1. **Open** the door completely.
2. **Remove** the two screws just above the oven door hinges.
3. **Close** door to the Broil Stop position (door will be open about 6 inches [15.2 cm]).
4. **Hold** the door firmly on both sides. **Pull** forward slightly, **lift** the door up and out of the hinge slots to remove. **Set** the door aside.

# Using The Self-Cleaning Cycle

The Self-Cleaning cycle saves you from the toil and mess that often come with hand-cleaning the oven interior. Like with the other functions of your oven, you operate the Self-Cleaning cycle with the easy-to-use electronic control. To use this cycle properly, follow the step-by-step instructions in this section.

## Before You Start

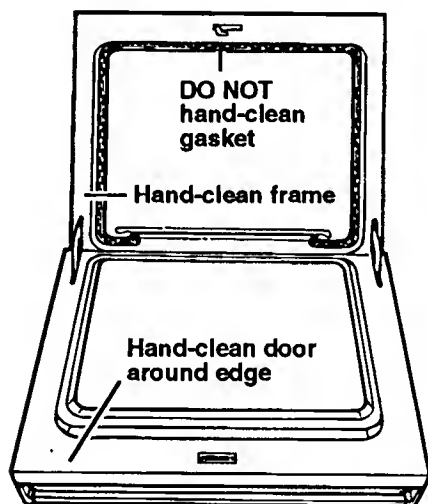

**Before you start the Self-Cleaning cycle, make sure you:**

- **Hand-clean** the areas shown. They do not get hot enough during the cleaning cycle for soil to burn away. Use hot water and detergent or a soapy steel-wool pad for cleaning.

**NOTE:** DO NOT clean, move or bend the gasket. Poor cleaning, baking and roasting may result.

- **Remove** the broiler pan grid and anything else being stored in the oven.
- **Wipe out** any loose soil or grease. This will help reduce smoke during the cleaning cycle.
- **Remove** the oven racks from the oven if you want them to remain shiny. You can clean racks in the Self-Cleaning cycle, but they will discolor and become harder to slide. If you clean racks in the Self-Cleaning cycle, place them on the rack guides.
- **Heat and odors** are normal during the Self-Cleaning cycle. Keep the kitchen well ventilated by opening a window or by turning on a vent hood or other kitchen vent during the cycle.

## ⚠ WARNING

### Personal Injury and Product Damage Hazard

- Do not touch the oven during the Self-Cleaning cycle. It could burn you.
- Do not use commercial oven cleaners in your oven. Cleaners may produce hazardous fumes or damage the porcelain finish.
- Do not leave foil in oven during the Self-Cleaning cycle. Foil can burn or melt and damage the oven surface.

**NOTE:** Do not force the Lock Lever. You could bend or break it. The lever is designed to stay locked until the oven is cool enough to open safely. Wait until it moves freely.

## Setting The Controls

### Before Setting Controls:

1. Make sure clock is set to correct time of day.

2. Set Lock Lever.

Move the Lock Lever all the way to the right—the Clean position.

### To Start Cleaning Immediately:

1. Choose clean setting.

PRESS

CLEAN

YOU SEE



A three-hour Self-Cleaning cycle will be set.

2. Set clean time (optional).

If you want a Self-Cleaning cycle other than three hours, **press** the desired Number pads for the new time up to four hours.

*Example:*  
PRESS



*Example:*  
YOU SEE



- Use 2 hours for light soil.
- Use 3-4 hours for moderate to heavy soil.

3. Start oven.

PRESS

START

ENTER

*Example:*  
YOU SEE



#### NOTES:

- The display will show "door" and a tone will sound if the door is not latched. Latch the door to continue with the Self-Cleaning cycle.
- If you want to change the cleaning time after cleaning has begun, repeat Steps 1-3.

### To Delay Clean Using Start Time:

1. Choose clean setting.

PRESS

CLEAN

YOU SEE



A three-hour Self-Cleaning cycle will be set.

## Using The Self-Cleaning Cycle

### 2. Set clean time (optional).

If you want a Self-Cleaning cycle other than three hours, **press** the desired Number pads for the new time up to four hours.

**Example:**  
**PRESS**



**Example:**  
**YOU SEE**



- Use 2 hours for light soil.
- Use 3-4 hours for moderate to heavy soil.

### 3. Set start time.

**PRESS**



**Example:**  
**YOU SEE**  
(time of day)



**Example:**  
**PRESS**



**Example:**  
**YOU SEE**



### 4. Complete entry.

**PRESS**



**Example:**  
**YOU SEE**



**NOTE:** If you want to change the cleaning time after cleaning has begun, repeat Steps 1-4.

**Example:**  
**YOU SEE**

**When the Self-Cleaning cycle starts:**



### After The Self-Cleaning Cycle Starts:

**NOTE:** You must not move the Lock Lever and you cannot open the door when LOCKED is on.

**Example:**  
**YOU SEE**

**When the oven temperature goes above normal baking/roasting temperatures:**



### After The Self-Cleaning Cycle Is Completed:

**Example:**  
**YOU SEE**  
(time of day)



## Using The Self-Cleaning Cycle

### When The Oven Cools To Normal Baking/Roasting Temperatures:

Move the Lock Lever back to the left. **DO NOT FORCE IT.** Wait until it moves easily.

*Example:*  
**YOU SEE**  
(time of day)

End 7:30

### To Stop The Self-Cleaning Cycle At Any Time:

PRESS

CANCEL  
OFF

*Example:*  
**YOU SEE**  
(time of day)

When the oven cools to normal baking/roasting temperatures:


End 12:00

When LOCKED goes off, move the Lock Lever back to the left. **DO NOT FORCE IT.** Wait until it moves easily.

## For Best Cleaning Results

- **After the oven is cool**, wipe up any residue or ash with a damp cloth or sponge. If any spots remain, clean with a mild abrasive cleanser or mildly abrasive pad.
- **Clean the oven** before it gets heavily soiled. Cleaning a very soiled oven takes longer and results in more smoke than usual.
- **If the Self-Cleaning cycle does not get the oven as clean as you expected**, the cycle may not have been set long enough or you may not have prepared the oven properly. Set the Self-Cleaning cycle longer the next time and hand-clean areas noted on page 36.

## How The Cycle Works

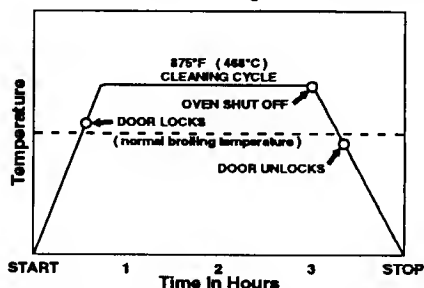

The Self-Cleaning cycle uses very high heat to burn away soil and grease. During the cycle, the oven gets much hotter than it does for normal baking or broiling. This high heat breaks up the soil or grease and burns it away.

Your oven is preset for a 3-hour Self-Cleaning cycle. However, you can adjust the cycle time to the amount of soil in your oven. You can set the cycle anywhere between 2 and 4 hours. (See "Setting The Controls" on page 37.)

The graph at the left is representative of a normal, 3-hour Self-Cleaning cycle. Note that the heating stops when the 3-hour setting is up, but it takes longer for the oven to cool enough to unlock.

# If You Need Assistance Or Service

**Questions or comments? Call our toll-free Consumer Assistance Center telephone number, 1-800-422-1230, 24 hours a day.**

This section is designed to help you save the cost of a service call. Part 1 of this section outlines possible problems, their causes, and actions you can take to solve each problem. Parts 2 and 3 tell you what to do if you still need assistance or service. When calling our Consumer Assistance Center for help or calling for service, please provide a detailed description of the problem, your appliance's complete model and serial numbers and the purchase or installation date. (See page 2.) This information will help us respond properly to your request.

## 1. Before calling for service ...

If your appliance should fail to operate, review the following list before calling your dealer. You could save the cost of a service call.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
<b>Nothing will operate</b>	The unit is not wired into a live circuit with proper voltage.	Wire the unit into a live circuit with proper voltage. (See Installation Instructions.)
	A household fuse has blown or a circuit breaker has tripped.	Replace household fuse or reset circuit breaker.
<b>The oven will not operate</b>	You have not set the electronic control correctly.	Refer to the section in this manual describing the function you are operating.
	You have programmed a delayed start time.	Wait for the start time to be reached.
<b>The Self-Cleaning cycle will not operate</b>	You have programmed a delayed start time.	Wait for the start time to be reached.
	The Lock Lever is not in the Clean position—all the way to the right.	Move Lock Lever all the way to the right.
	Fan is not running. If fan is running, you can hear it.	Call a KitchenAid service technician for repair.



## *If You Need Assistance Or Service*

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
<b>Cooking results are not what you expected</b>	The oven is not level.	Level oven. (See Installation Instructions.)
	The oven temperature seems too low or too high.	Adjust the oven temperature. (See "Adjusting Oven Temperature" on page 14.)
	You did not preheat the oven before baking.	Preheat oven when called for in recipe.
	The recipe has never been tested or is not from a reliable source.	Use only tested recipes from a reliable source.
	The pan used is not the correct type or size.	Refer to a reliable cookbook or recipe for recommended pan type and size.
	There is not proper air circulation around pan when baking.	Allow 1½ to 2 inches (4-5 cm) of air space on all sides of pan. There must be a minimum space of 1 inch.
<b>The display is flashing "88:88"</b>	There has been a power failure.	Reset the clock. (See page 9.)
<b>"F-" followed by a number shows in the display</b>		Call for service. (See Step 3 on page 42.)

## *If* You Need Assistance Or Service

### **2. If the problem is not due to one of the items listed in Step 1:**

- Call KitchenAid Consumer Assistance Center:

**1-800-422-1230**

One of our trained consultants can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

- If you prefer, write to:

Consumer Assistance Center  
KitchenAid  
P.O. Box 558  
St. Joseph, MI 49085-0558

Please include a daytime phone number in your correspondence.

### **3. If you need service:**

- Call your dealer or the repair service he recommends.
- All service should be handled locally by the dealer from whom you purchased the unit or an authorized KitchenAid servicer.
- If you are unable to obtain the name of a local authorized KitchenAid servicer, call our Consumer Assistance Center telephone number (see Step 2).

### **4. If you are not satisfied with the action taken:**

- Contact the Major Appliance Consumer Action Panel (MACAP). MACAP is a group of independent consumer experts that voices consumer views at the highest levels of the major appliance industry.

- Contact MACAP only when the dealer, authorized servicer and KitchenAid have failed to resolve your problem.

Major Appliance Consumer Action Panel  
20 North Wacker Drive  
Chicago, IL 60606

- MACAP will in turn inform us of your action.

## Notes

# KitchenAid®

## Electric Built-In Combination Microwave/ Single Oven Warranty

LENGTH OF WARRANTY:	KITCHENAID WILL PAY FOR:	KITCHENAID WILL NOT PAY FOR:
<b>ONE YEAR FULL WARRANTY</b> FROM DATE OF INSTALLATION.	Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an authorized KitchenAid servicing outlet.	<b>A. Service calls to:</b> <ol style="list-style-type: none"> <li>1. Correct the installation of the oven.</li> <li>2. Instruct you how to use the oven.</li> <li>3. Replace house fuses or correct house wiring.</li> </ol> <b>B. Repairs when oven is used in other than normal home use.</b> <b>C. Damage resulting from accident, alteration, misuse, abuse, improper installation or installation not in accordance with local electrical codes.</b> <b>D. Any labor costs during the limited warranties.</b> <b>E. Replace parts or repair labor costs for units operated outside the United States.</b> <b>F. Pickup and delivery. This product is designed to be repaired in the home.</b> <b>G. Repairs to parts or systems caused by unauthorized modifications made to the appliance.</b>
<b>SECOND THROUGH FIFTH YEAR LIMITED WARRANTY</b> FROM DATE OF INSTALLATION.	Replacement microwave magnetron or any oven electric element to correct defects in materials or workmanship. Replacement parts for solid state touch control system to correct defects in materials or workmanship.	
<b>SECOND THROUGH TENTH YEAR LIMITED WARRANTY</b> FROM DATE OF INSTALLATION.	Replacement parts for the porcelain oven cavity/inner door if the part rusts through due to defects in materials or workmanship.	

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

If you need service, first see the "Assistance or Service" section of this book. After checking "Assistance or Service," additional help can be found by calling our Consumer Assistance Center telephone number, **1-800-422-1230**, from anywhere in the U.S.

KitchenAid  
St. Joseph, Michigan, U.S.A. 49085



**Part No. 3184437 Rev. A**

Printed on recycled paper

© 1993 KitchenAid

© Registered Trademark/TM Trademark of KitchenAid.

Printed in U.S.A.